


BURBANK UNIFIED SCHOOL DISTRICT
EMERGENCY OPERATIONS

SANDBOX LAYOUT FOR SANITARY AREA

SITES TO SUBSTITUTE APPROPRIATE SITE LAYOUT AND SET-UP PLAN

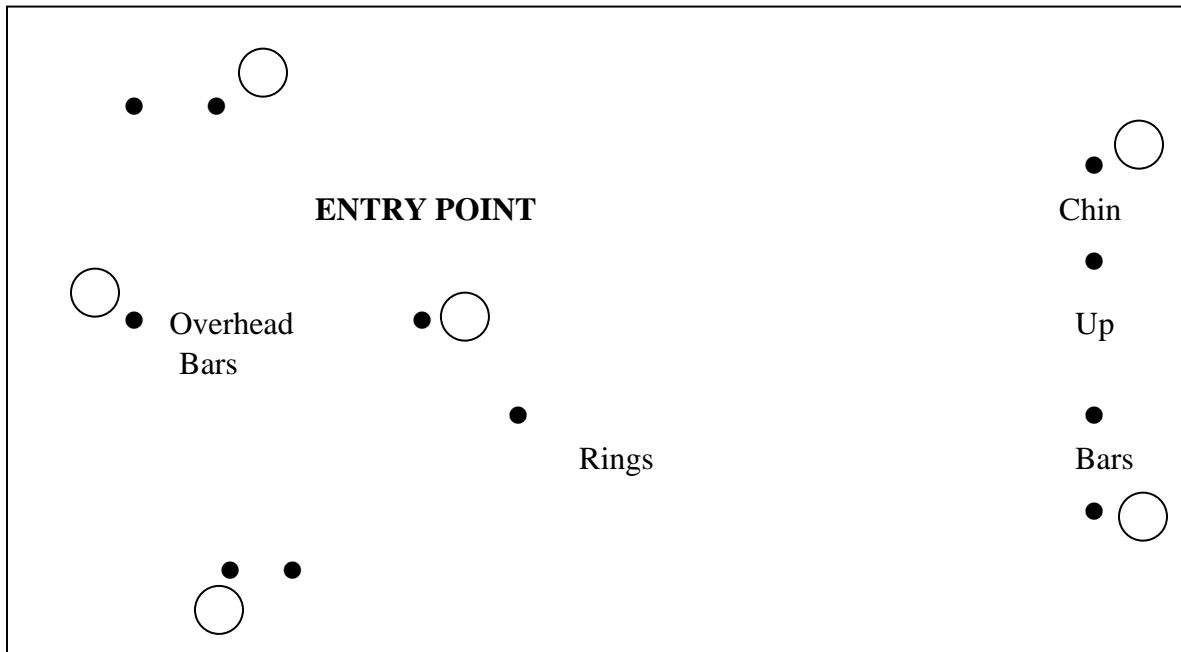

Equipment/Supplies:

- Rolls of electrical wire
- Stainless spring clamps
- Black polyethylene sheeting
- Portable toilets
- Toilet paper holders
- Toilet Paper
- Spare toilet bags
- Urinal buckets
- Bucket liners

Assembly Instructions:

- Start at #1 by wrapping wire securely around pole approximately 4 to 4-1/2 feet above sand level.
- Continue on to #'s 2 thru 6, stretching wire tightly and wrapping each pole before continuing to the next.
- Hang 5-foot wide strips of black polyethylene sheeting over the wire and clamp (like a clothespin) using the clamps provided.
- Leave a little extra on the bottom as it may be necessary to apply weights between posts to keep it from blowing in the breeze.
- Recommended entry point is between #'s 1 & 6.
- Set up portable toilets, urinal buckets, and toilet paper holders inside enclosure.